
# ATRIA 6

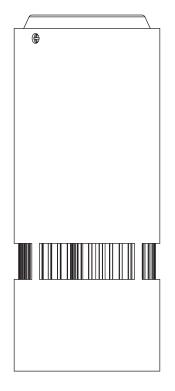



## FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4


- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



meteor-lighting.com

## ATRIA 6 ADJUSTABLE CABLE 0-10V/TRC/LDE1

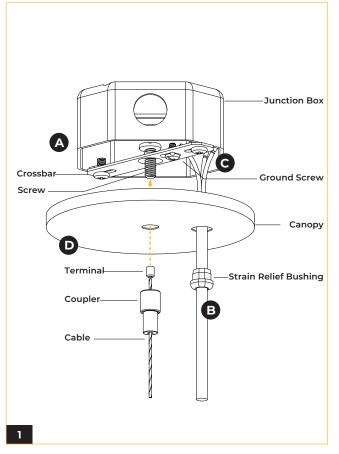

<image>

**METEPR** 

Loosen four Phillips screws on the side of the wiring box to remove the mounting bracket.


(A) Secure the crossbar to the junction box (by others) designed to support the weight of the fixture.

**(B)** Lock the strain relief bushing to the power cord with allowance for wiring connections, and thread the power cord through the canopy wire hole.

**(C)** Connect the Green ground conductor to the ground screw on the crossbar, the line voltage to the Black conductor, and the neutral to the White conductor. Please refer to the wiring diagram section for more information of all wiring connections.


**(D)** Thread the cable through the coupler with the terminal side on top. Slide the coupler up to the canopy and secure with the screw on crossbar.

# ATRIA 6 ADJUSTABLE CABLE 0-10V/TRC/LDE1

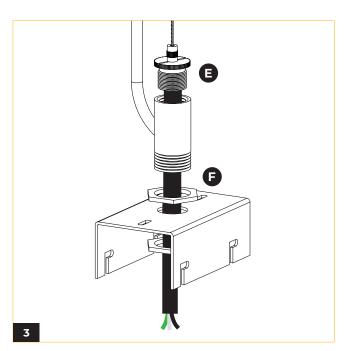

**(E)** Insert the cable through the gripper and plunger. Trim off extra cable using cable cutting tool. To adjust the cable to desired length, press the plunger.

**(F)** Fasten Powerfeed tube and Nut. Secure gripper with Powerfeed tube, then feed cord through Powerfeed tube.

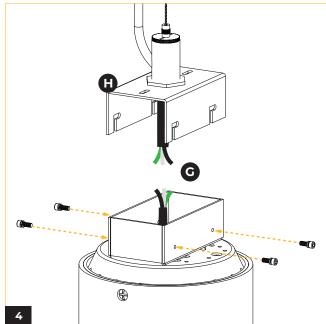


**METE**<sup>O</sup>R

(G) Make electric connection inside the wiring box.

**(H)** Screw four Phillips screws to fasten the mounting bracket.

## ATRIA 6 ADJUSTABLE CABLE DMX

# METE<sup>O</sup>R

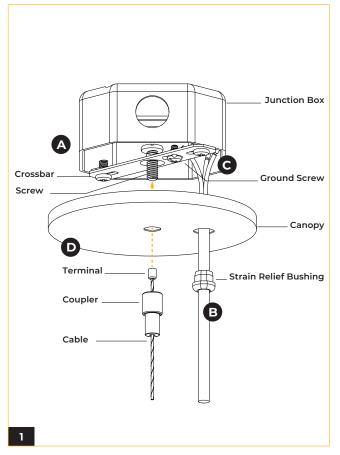

Loosen four Phillips screws on the side of the wiring box to remove the mounting bracket.

(A) Secure the crossbar to the junction box (by others) designed to support the weight of the fixture.


**(B)** Lock the strain relief bushing to the power cord with allowance for wiring connections, and thread the power cord through the canopy wire hole.

**(C)** Connect the Green ground conductor to the ground screw on the crossbar, the line voltage to the Black conductor, and the neutral to the White conductor. Please refer to the wiring diagram section for more information of all wiring connections.

**(D)** Thread the cable through the coupler with the terminal side on top. Slide the coupler up to the canopy and secure with the screw on crossbar.


## ATRIA 6 ADJUSTABLE CABLE DMX

# METE<sup>O</sup>R

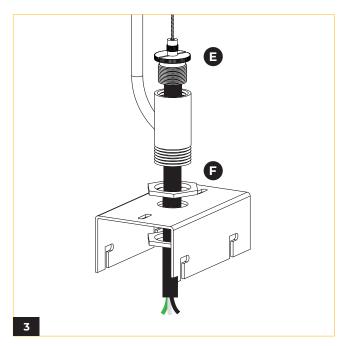

**(E)** Insert the cable through the gripper and plunger. Trim off extra cable using cable cutting tool. To adjust the cable to desired length, press the plunger.

**(F)** Fasten Powerfeed tube and Nut. Secure gripper with Powerfeed tube, then feed cord through Powerfeed tube.

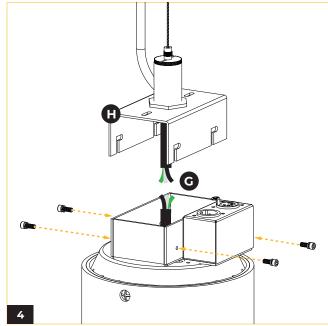

(G) Make electric connection inside the wiring box.


**(H)** Screw four Phillips screws to fasten the mounting bracket.

## ATRIA 6 WIRING DIAGRAM




#### WIRING DIAGRAM


STV / SPV 0-10V

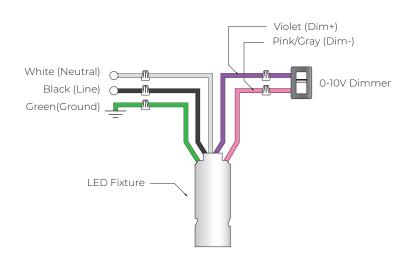

SPV

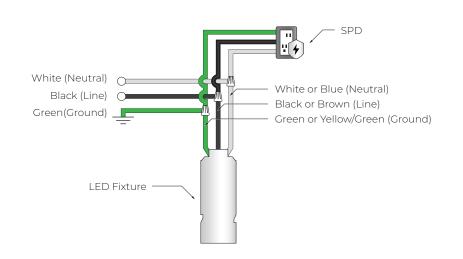

#### SPV 0-10V (Tunable White)

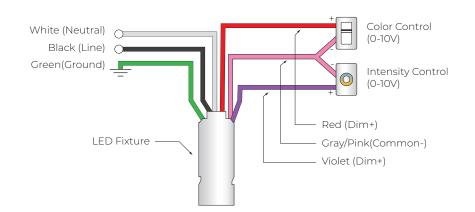


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.

## ATRIA 6 WIRING DIAGRAM


# METE<sup>O</sup>R

#### WIRING DIAGRAM


LDE1

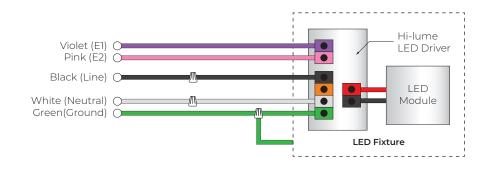


TRC

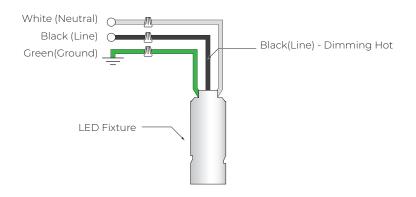


#### DMX / DMX (Tunable White)

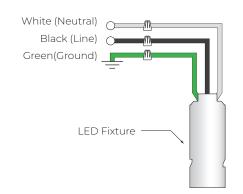

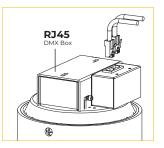

Connect DMX by using a standard shielded CAT 5/6 cable.

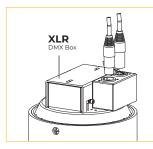

Connect DMX by using a standard DMX512 XLR cable with 5 pin in/out connector (by others).

\*The last fixture has to be terminated with a DMX Terminator (by others).

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. @Meteor Illumination Technologies, Inc.

## ATRIA 6

# **METE**<sup>O</sup>R

### NOTES

### Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

#### Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of  $120\Omega$  and a low capacitance. For instance : Belden 9729.
- 4. DMX must be terminated with a  $120\Omega$  resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For Tunable White fixtures, After "32" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX Thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of  $120\Omega$  and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of  $100\Omega$ .
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.

**meteor-lighting.com** 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. @Meteor Illumination Technologies, Inc. 06-28-2024