



IMPORTANT SAFETY INFORMATION

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


**FOR FIELD ASSISTANCE PLEASE CALL
+1-213-255-2060 #4**

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

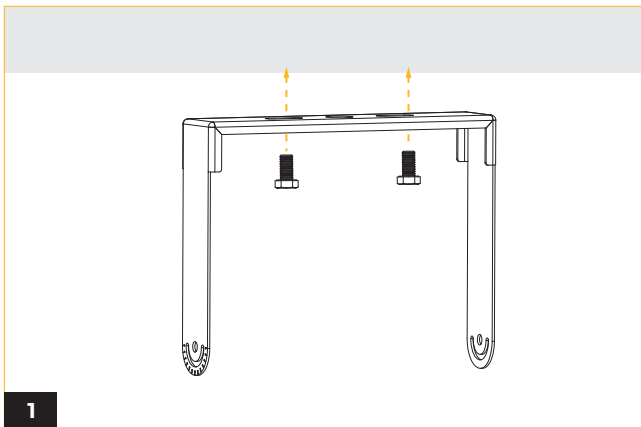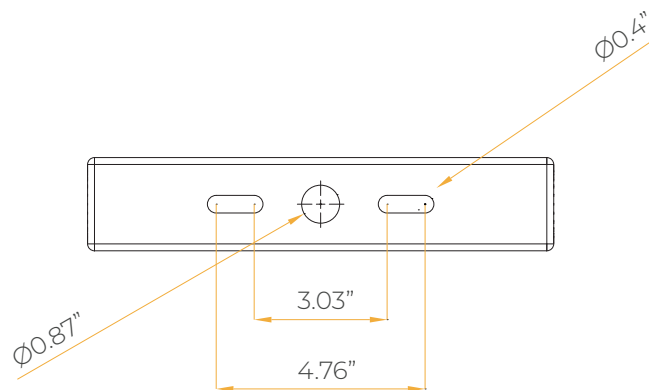


Secure bracket to a level surface with mounting hardware that is sufficient to support weight of the fixture and power box.

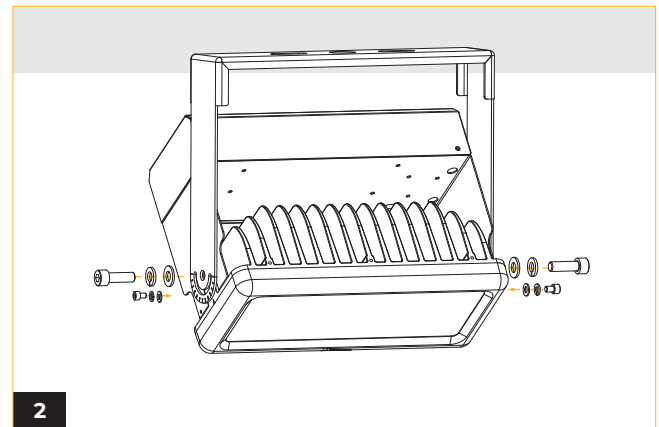

Slip the power box hook with fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.

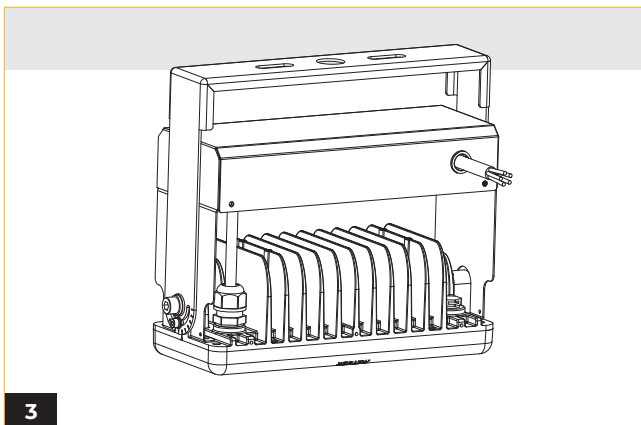

Establish electrical connections (Refer to wiring diagram)

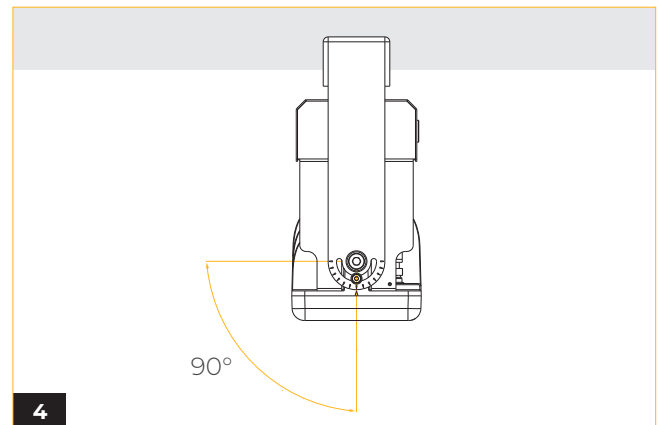

The light engine can be adjusted within a range of ± 90 degrees. To secure the rotated position, tighten the screws on each side.

WIRING DIAGRAM

Standard 0-10V

*Not to scale

