

## **IMPORTANT SAFETY INFORMATION**

**READ AND FOLLOW ALL SAFETY INSTRUCTIONS**


---

**FOR FIELD ASSISTANCE PLEASE CALL  
+1-213-255-2060 #4**


---

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

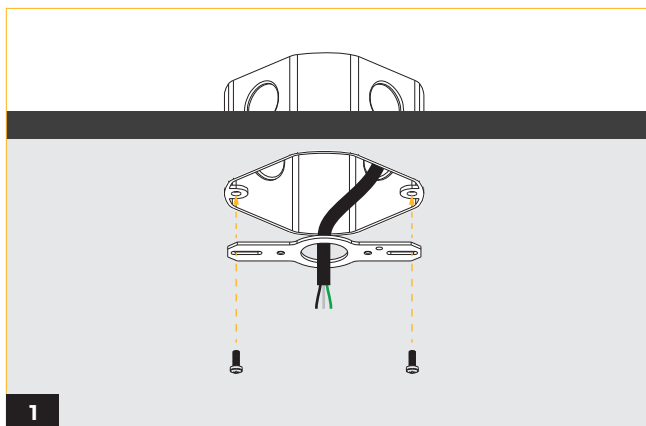


1  
Secure the crossbar to junction box (by others), using two phillips screws.

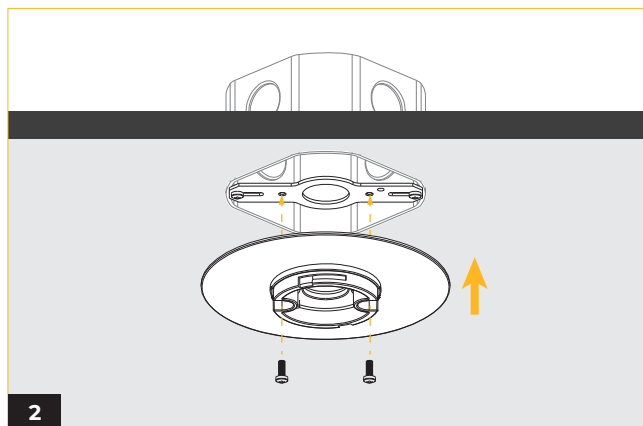


2  
Screw the surface adjustable mount plate onto the bracket in the two holes indicated.

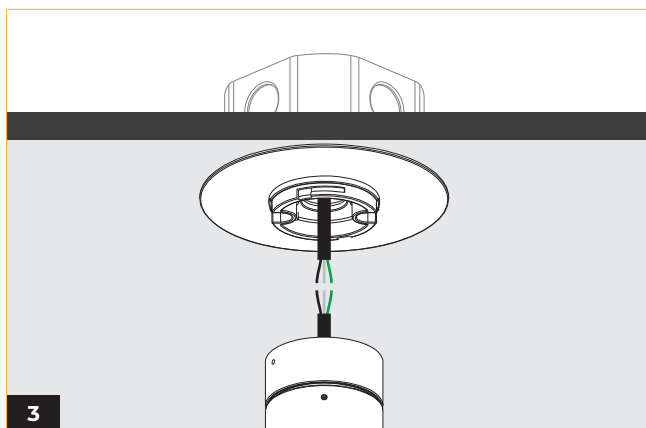

3  
Refer to the wiring diagram for connection to the junction box.

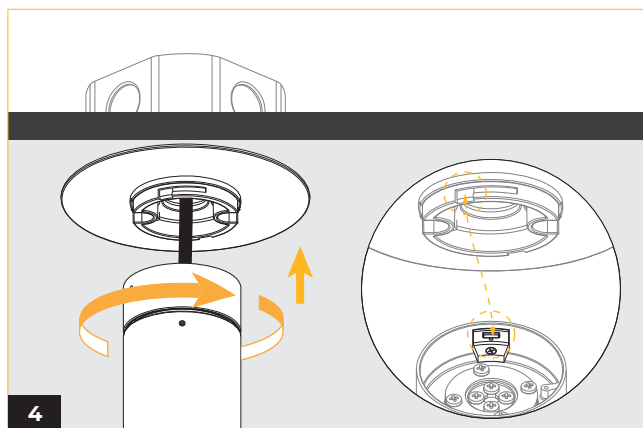

4  
Align the bottom part of the fixture with the surface mount plate by matching the U-shaped openings.

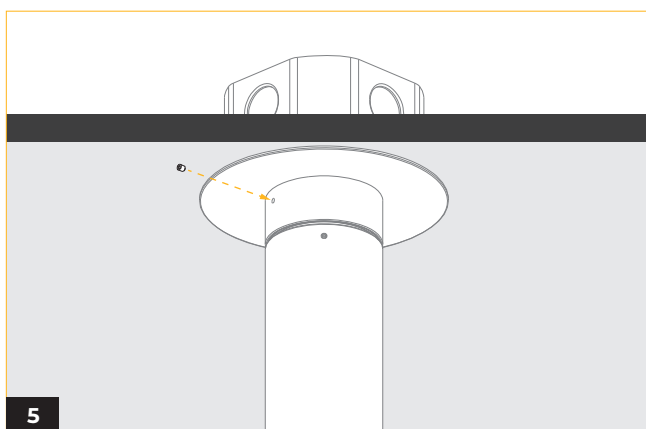


5  
Secure fixture with hex screw.

## WIRING DIAGRAM

0-10V / Superior 0-10V

\*Not to Scale

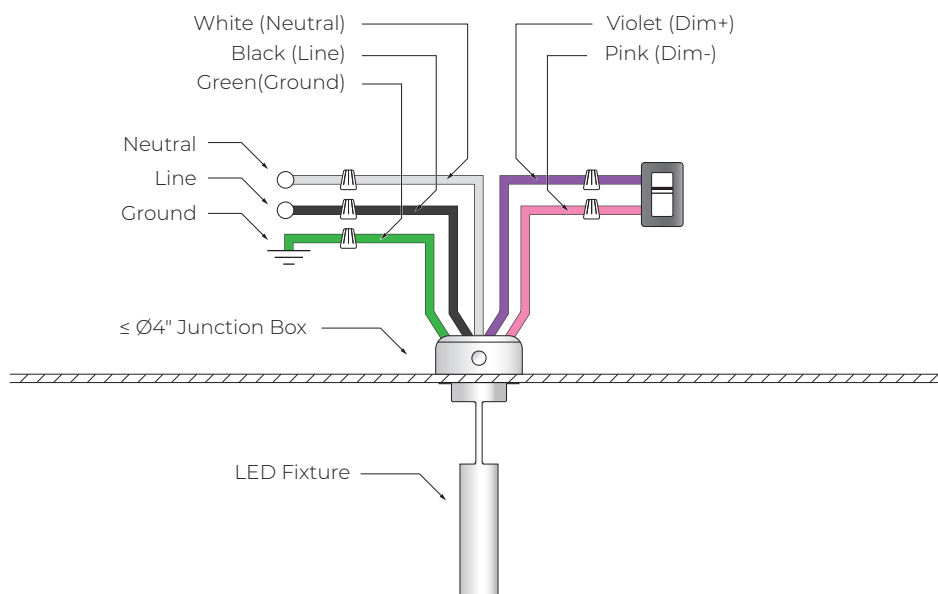

TRC

\*Not to Scale

