



FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




meteor-lighting.com

DOT 2 SURFACE MOUNT




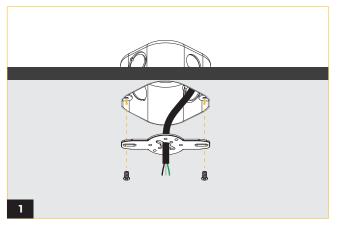


Secure the crossbar to junction box (by others), using two phillips screws.

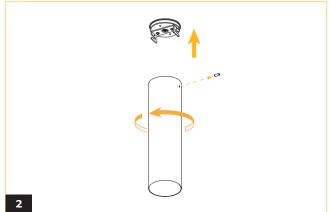


Remove top cover of luminaire by removing the hex screw located on the side of the luminaire.

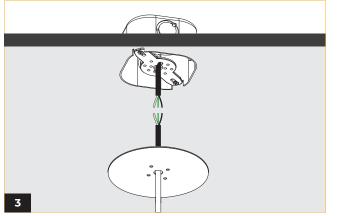


Make electrical connections between crossbar and mounting plate. Refer to the wiring diagram for more detailed instructions.

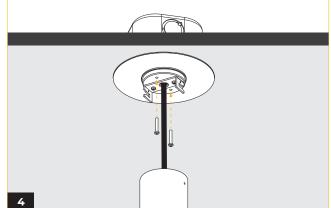

Secure top cover of luminaire to canopy plate using 2 phillips screws

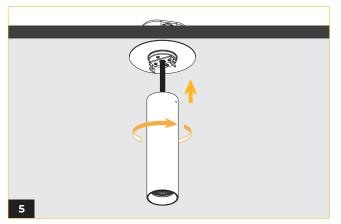

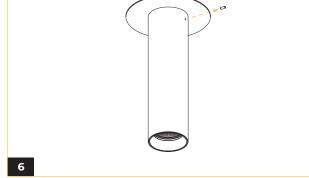

Secure the luminaire onto the top cover by hoisting level and rotating clockwise.


Secure fixture with hex screw.



*Not to Scale

WIRING DIAGRAM

0-10V / Superior 0-10V White (Neutral) -Violet (Dim+) Black (Line) -Pink (Dim-) Green(Ground) -Neutral -Line \cap /Π\ Ground (≤ Ø4" Junction Box 0 LED Fixture –

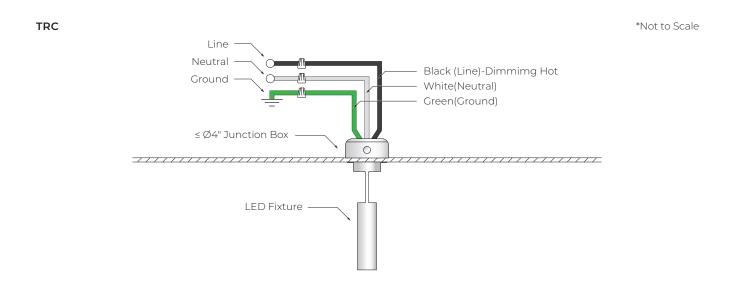

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060

Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.