


IMPORTANT SAFETY INFORMATION

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


**FOR FIELD ASSISTANCE PLEASE CALL
+1-213-255-2060 #4**

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

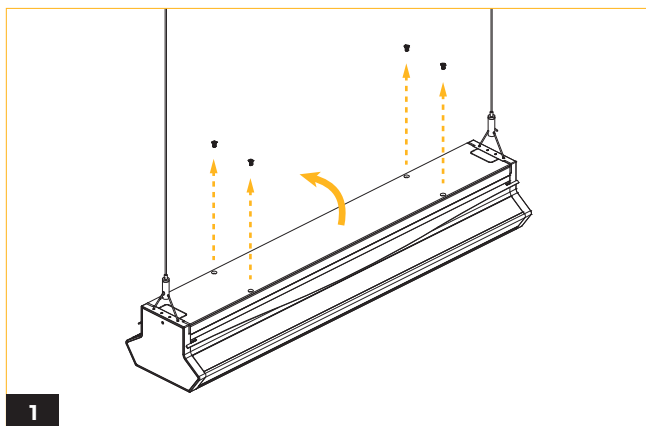


1 Remove the four screws and swing open the hinged top cover to access the internal components.

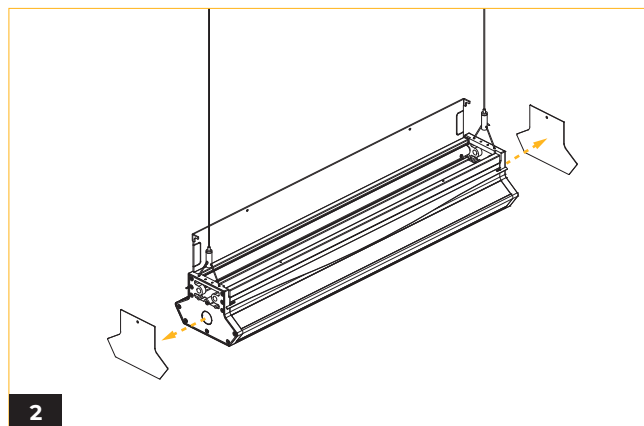


2 Remove the front and rear cover plates, which are held in place by magnets.

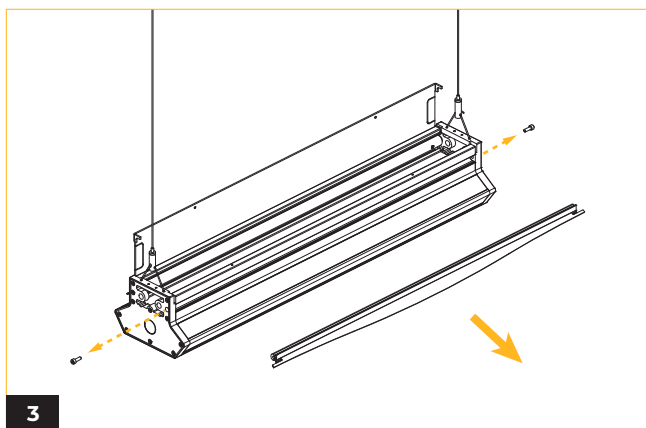


3 Loosen the mounting screws securing the diffuser, then carefully detach the diffuser from the fixture.

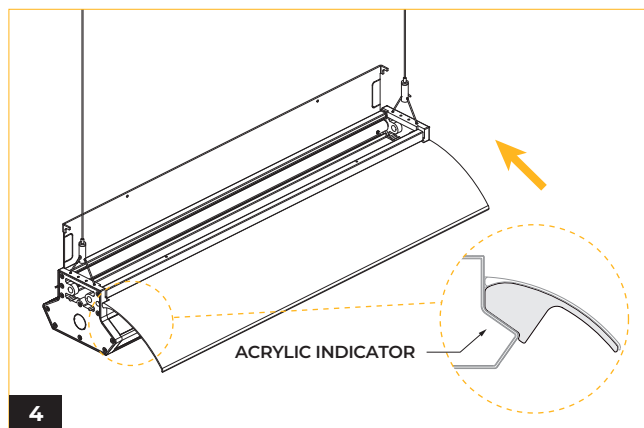

4 Slide the downlight blade into the groove, using the acrylic indicator to position it at the correct angle.

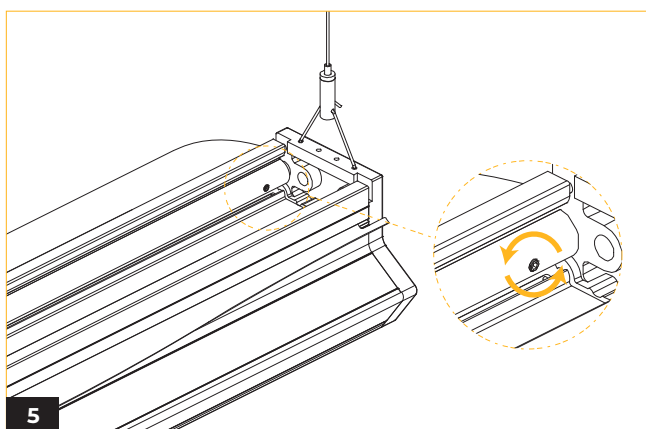

5 Ensure the blade angle aligns with the indicator, then secure it in place by fastening the screws from the inside.

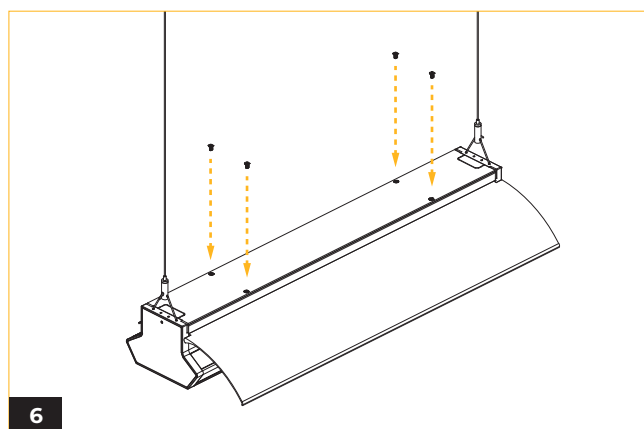

6 Reinstall the top cover and secure it in place with screws. Reinstall the front and rear cover plates over by fastening the four screws.