


IMPORTANT SAFETY INFORMATION

READ AND FOLLOW ALL SAFETY INSTRUCTIONS


**FOR FIELD ASSISTANCE PLEASE CALL
+1-213-255-2060 #4**

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

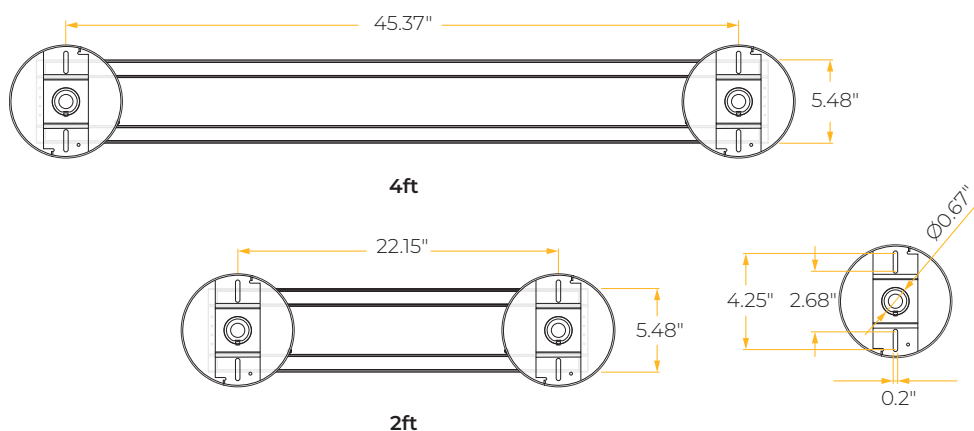


STEM DIMENSIONS

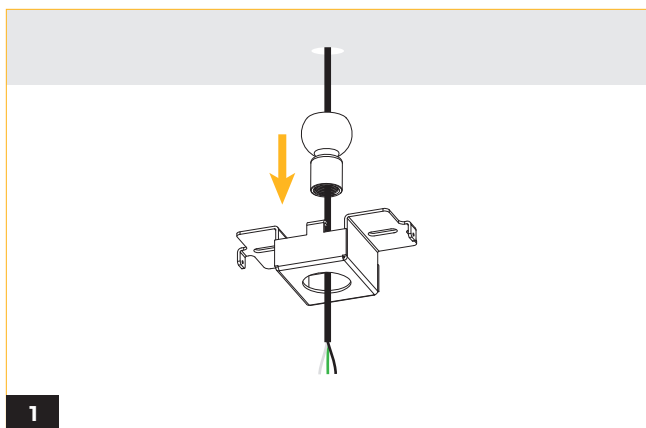


1

Insert the half ball through the opening in the swivel crossbar. Thread the AC wires through both the half ball and the swivel crossbar.

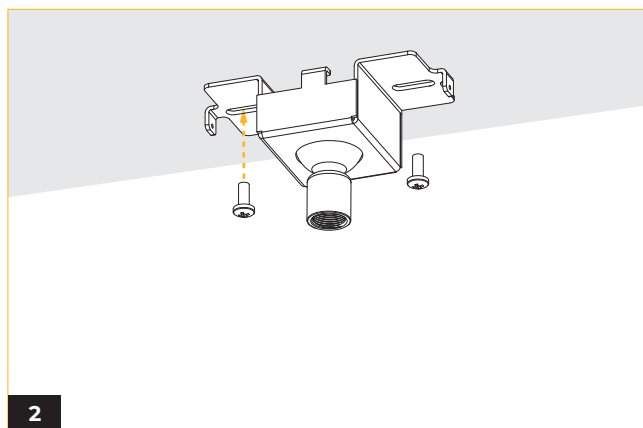


2

Mount the swivel crossbar onto a flat surface and secure it using the provided screws.

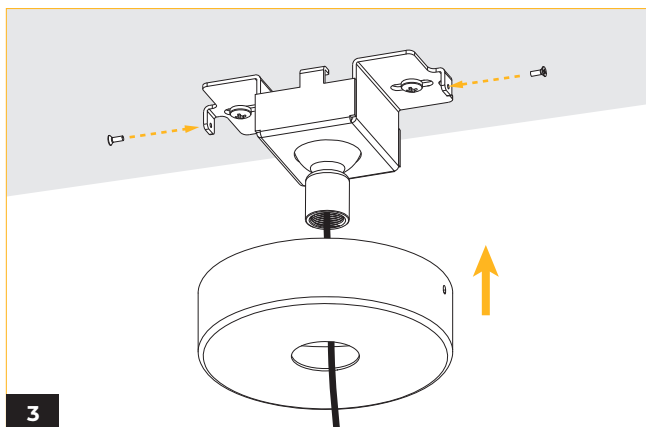


3

Position the canopy over the crossbar and fasten it firmly in place with screws on both sides.

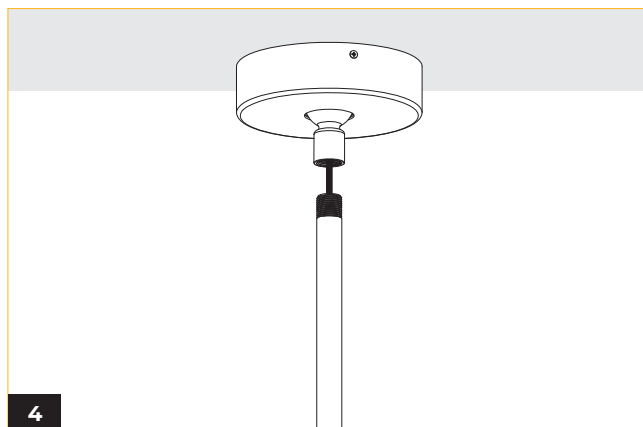


4

Thread the stem into the half ball, ensuring that the supply wires are passed through the stem.

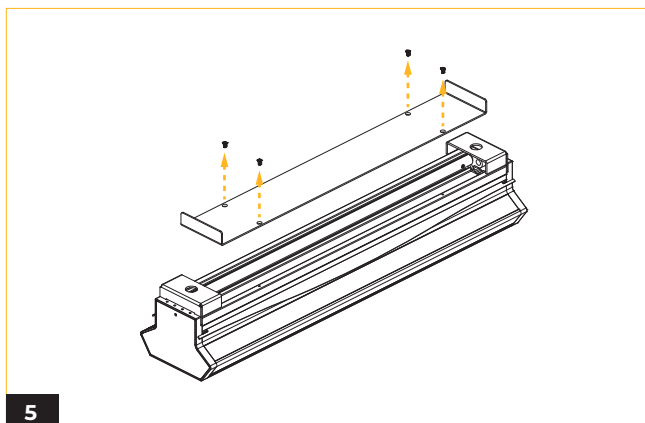


5

Unscrew the four screws from the top cover and carefully remove it from the fixture.

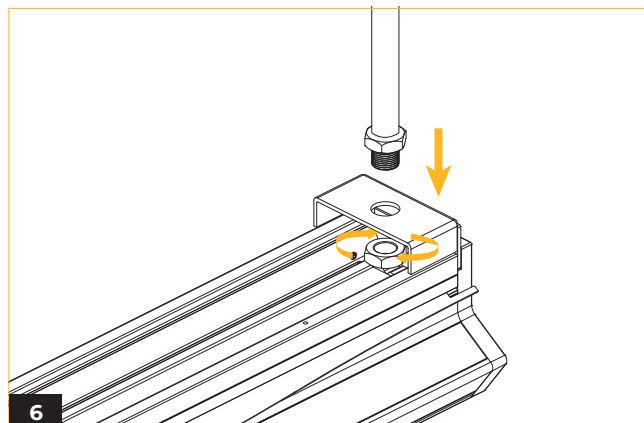


6

Position the stem against the mounting surface and secure it tightly using the hex nut.

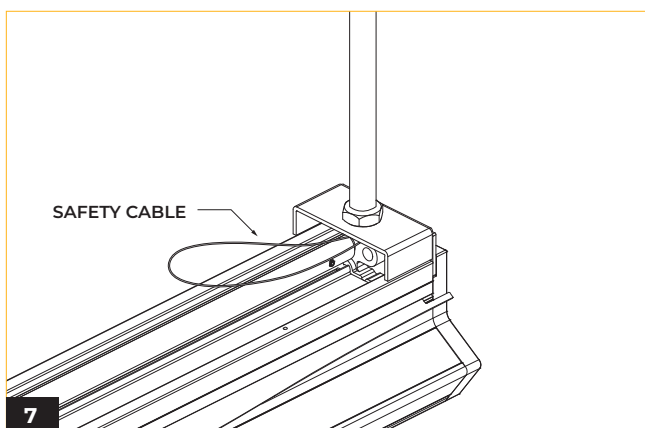


7

Pull out the safety cable from inside the stem and attach it to the fixture.

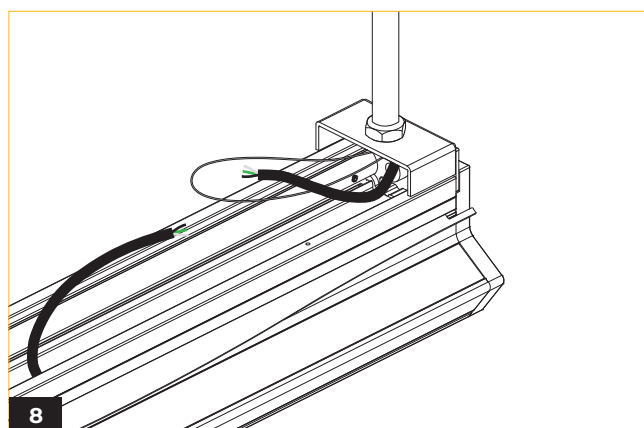

8

Pull the power cables through the stem and connect them to the fixture's internal wiring (refer to the wiring diagram).

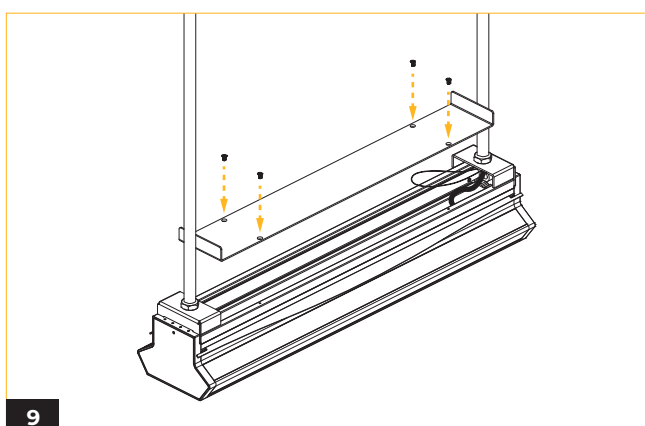


9

Reinstall the top cover and secure it in place with four screws.

WIRING DIAGRAM

NOD

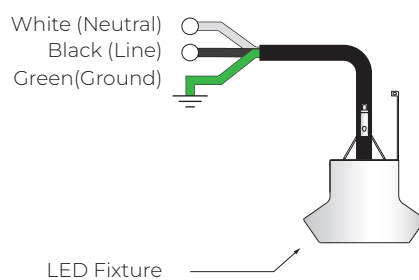

STV 0-10V

