


IMPORTANT SAFETY INFORMATION READ AND FOLLOW ALL SAFETY INSTRUCTIONS


**FOR FIELD ASSISTANCE PLEASE CALL
+1-213-255-2060 #4**

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

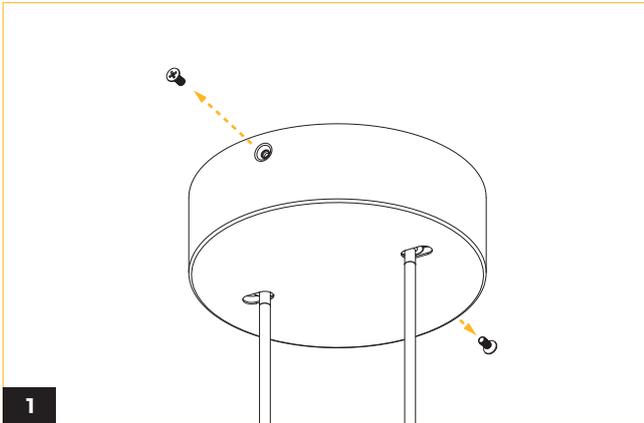


Remove the screws located on both sides of the canopy.

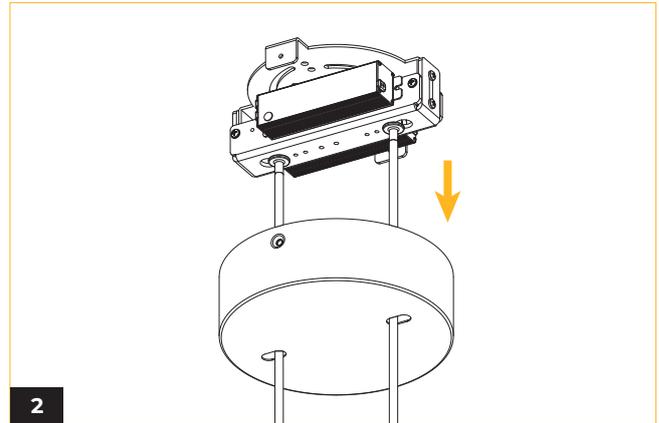


Slide the canopy downwards to remove it from the assembly.

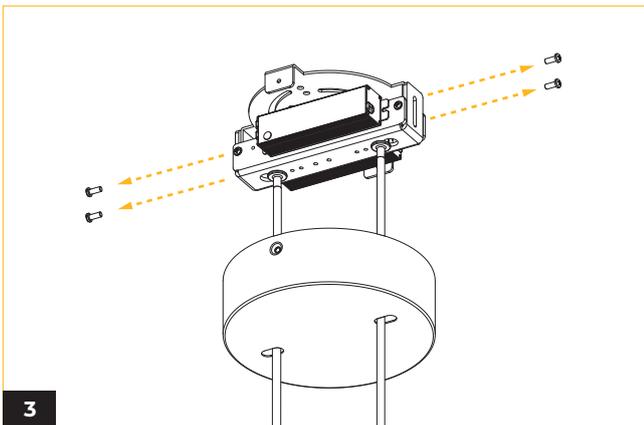


Remove the screws on both sides of the Power Module.

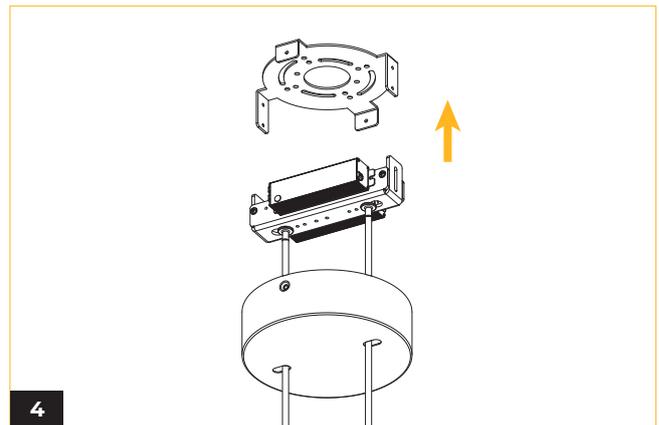


Unscrew the ring plate located on the top of the fixture.

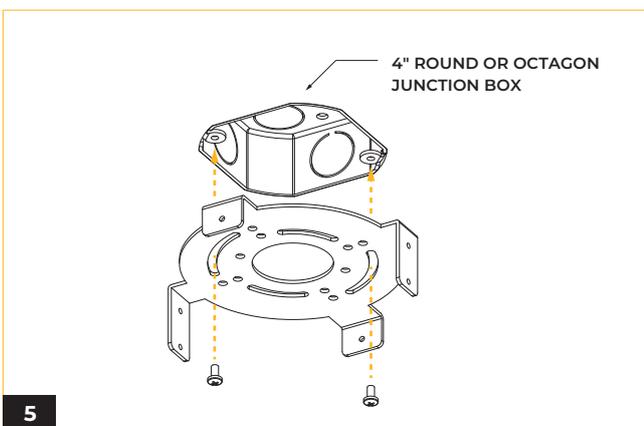


Align the ring plate with the junction box (by others) and secure it firmly using the provided screws.

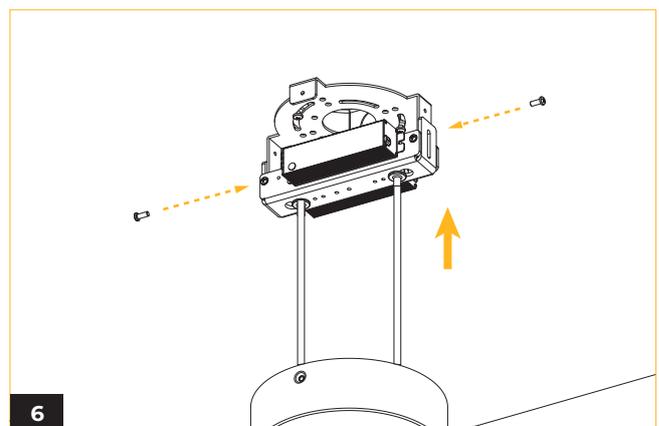


Position the Power Module against the mounting surface and secure the screws on both sides.

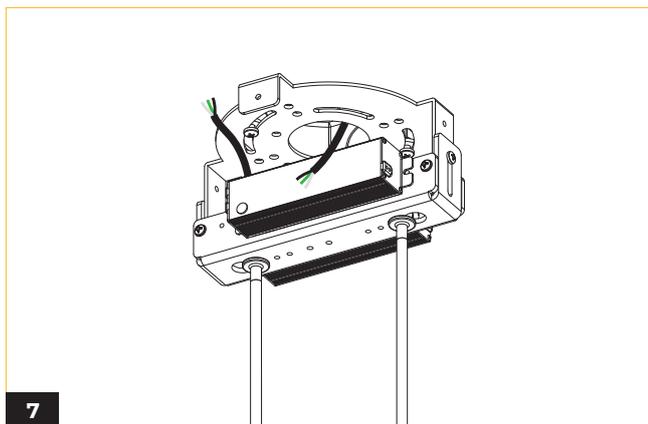

Make electrical connections between the junction box and the Power Module (Refer to wiring diagram).

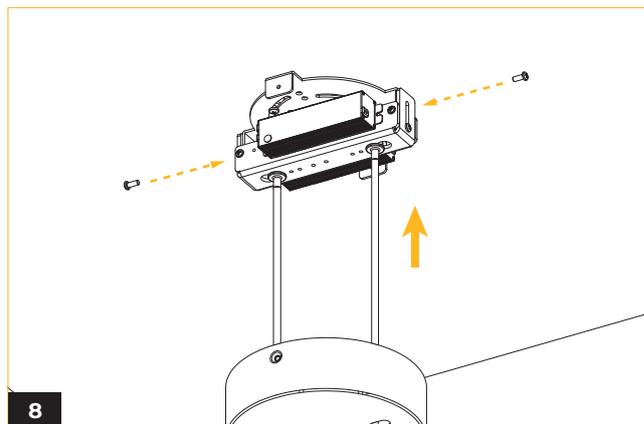

Align the Power Module and fasten it in place with screws.

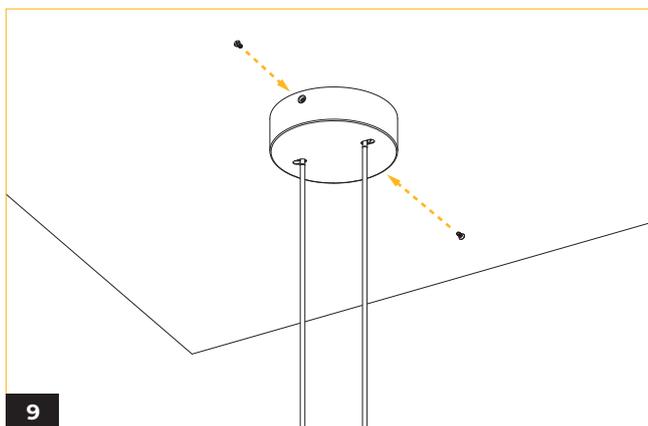


Align the canopy with the module and secure it using the side screws.

WIRING DIAGRAM


Non-Dimming

*Not to scale

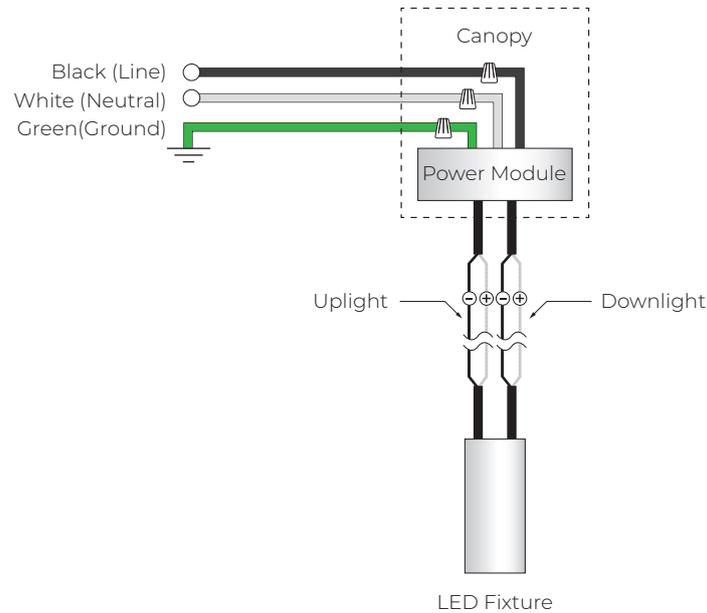

TRC


*Not to scale

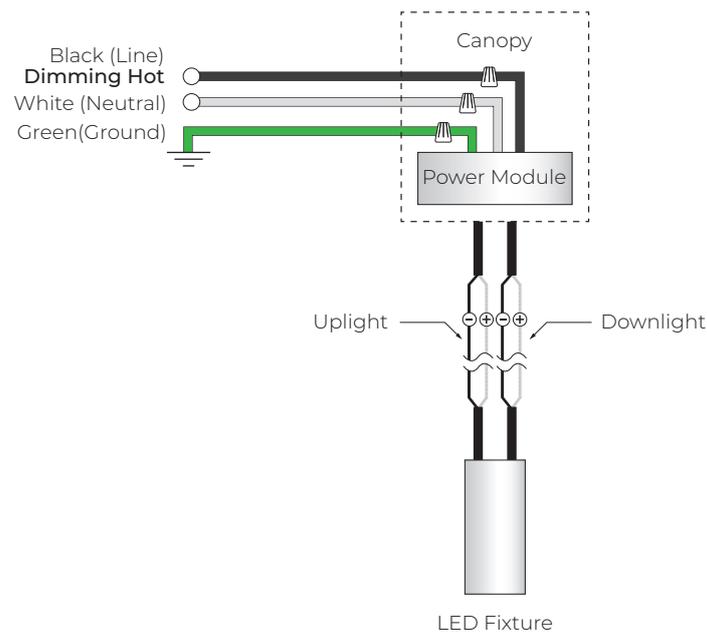

WIRING DIAGRAM


SPVS

*Not to scale

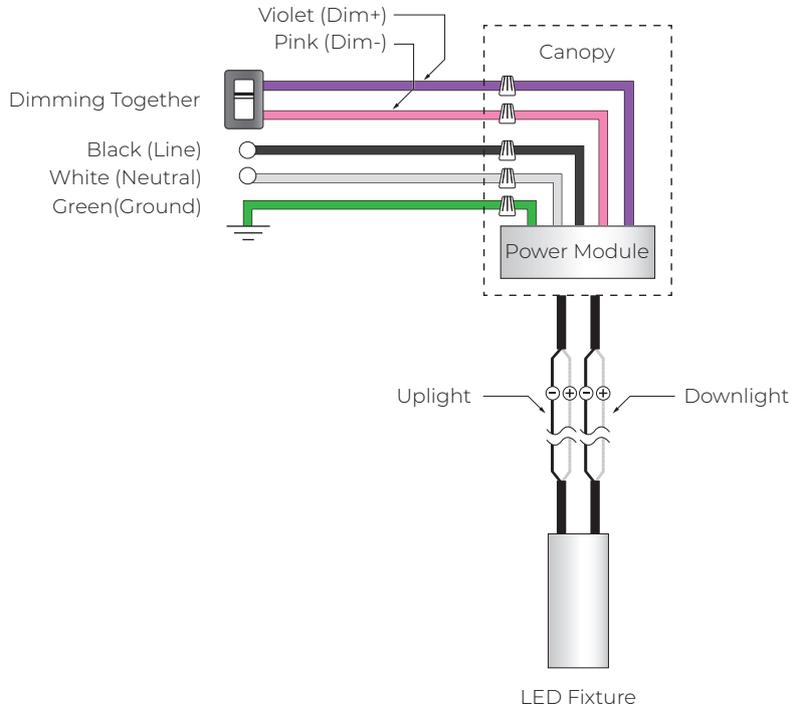

DALIS/DALID

*Not to scale

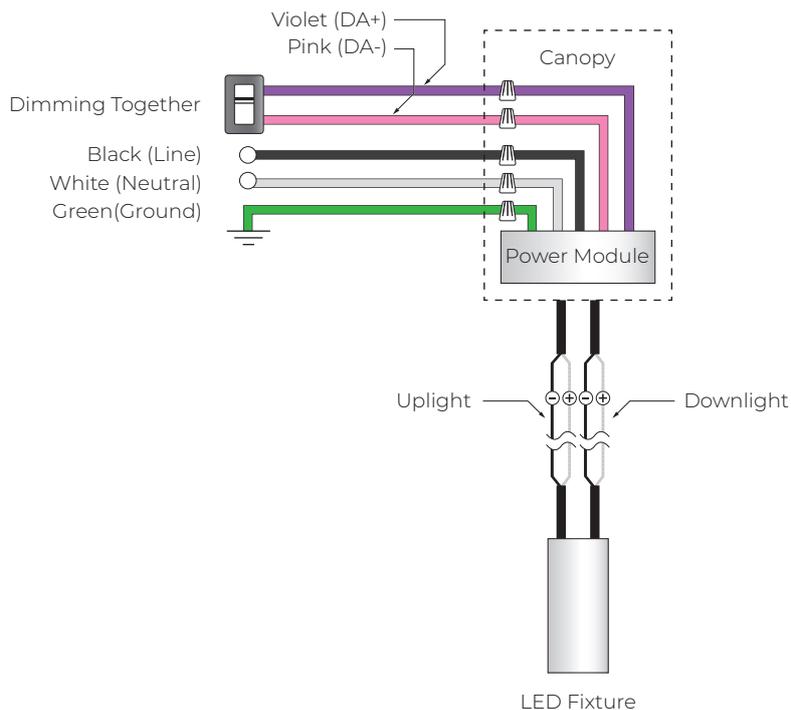

WIRING DIAGRAM

SPVD

*Not to scale

