
O.S ZIHW

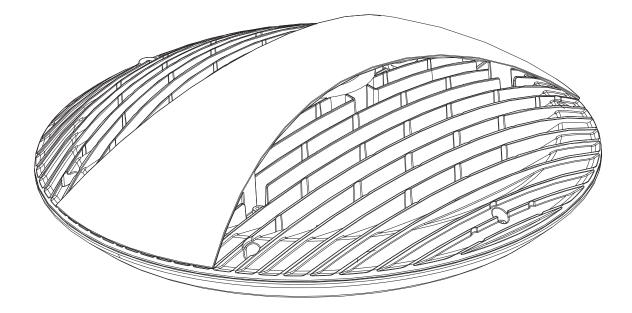



FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE





meteor-lighting.com

INSTALLATION GUIDE


WHIZ 2.0 ADJUSTABLE CABLE

METE^OR

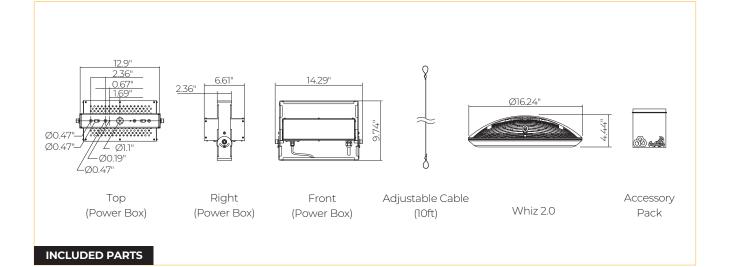

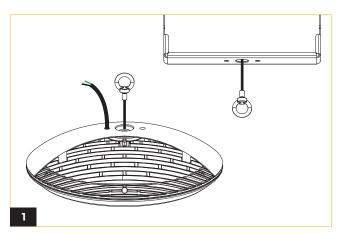


Fasten the 2 hook rings available in the accessory pack to both the fixture and lower bracket.

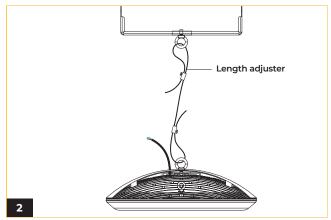

Loop the adjustable cable through the length adjuster looping and fastening at the desired height.




Attach the fixture cables through the lower bracket.

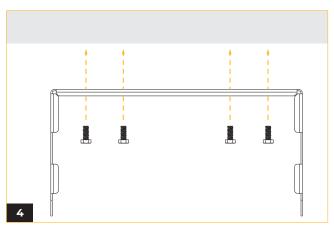


Fasten the top bracket on the desired location on the ceiling.

WHIZ 2.0 ADJUSTABLE CABLE


METE^OR

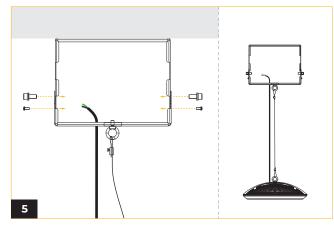


Align both lower and upper brackets and fasten in place.

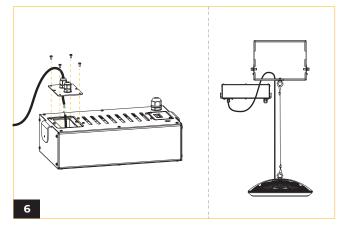


Open the DC Junction box and connect cables. Refer to wiring diagram section.

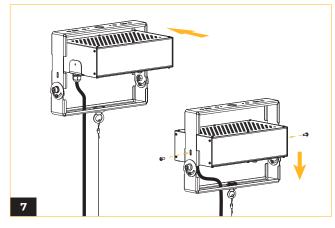

Slip the power box hook fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.

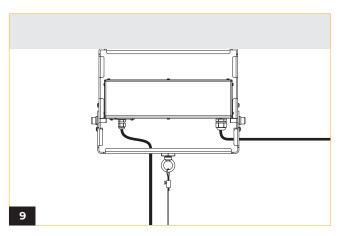


Connect AC Cable to Junction Box.

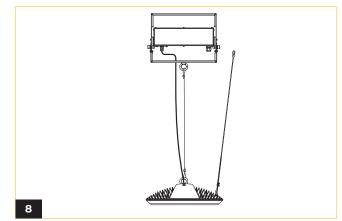


Hook the safety cable.



STV 0-10V (120W/170W/240W)

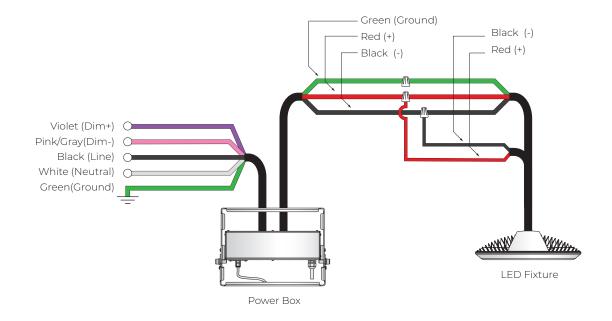


STV 0-10V (300W)

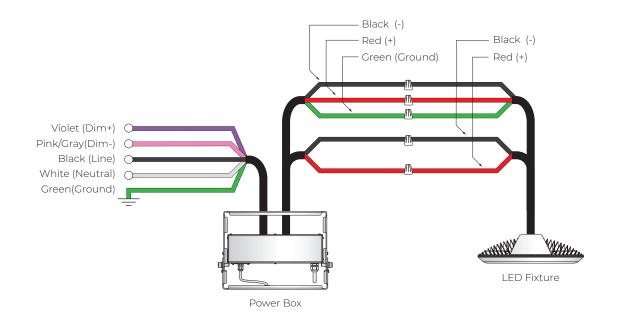


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.



SPV 0-10V

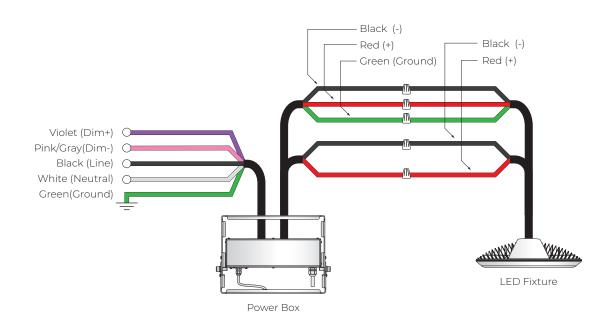


SPV 0-10V (Tunable White) 150W

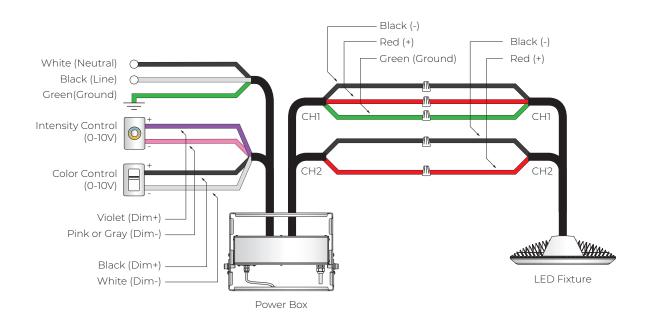


WHIZ 2.0 WIRING DIAGRAM

METE^OR

WIRING DIAGRAM

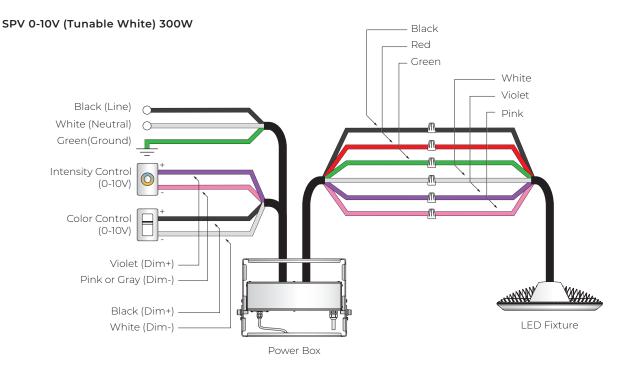

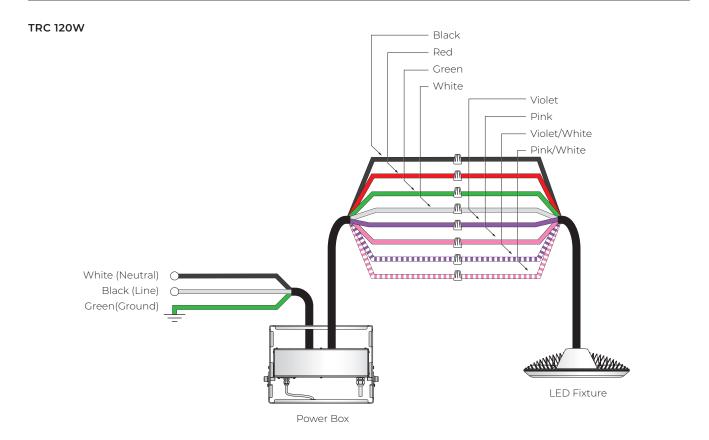


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060


Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.




DMX

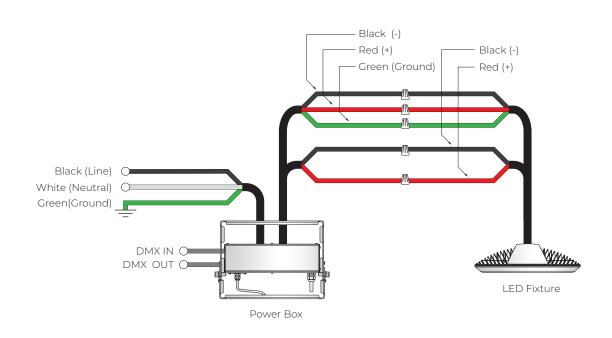


DMX (Tunable White) 150W

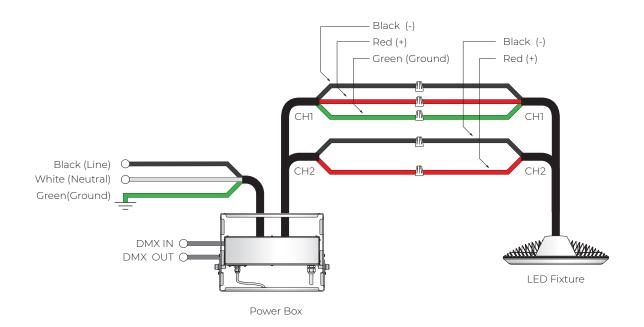



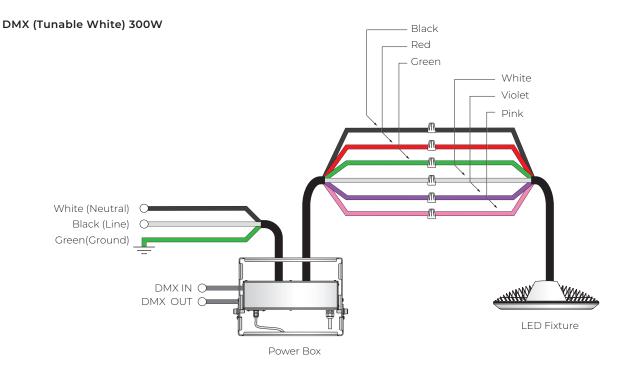


DMX (W+RGB)

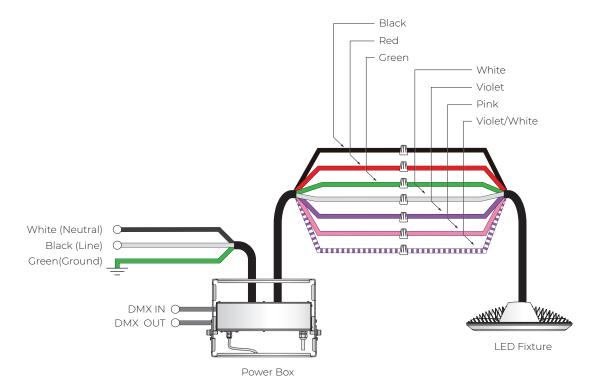


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.



DMX RJ45

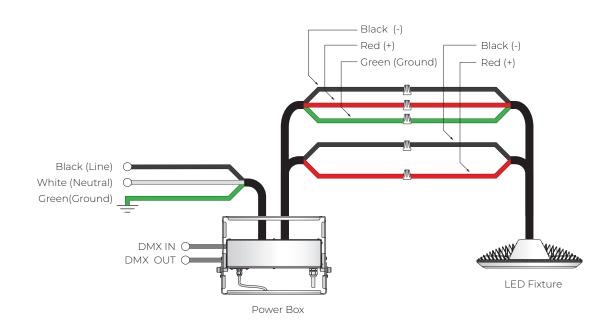


DMX RJ45 (Tunable White) 150W

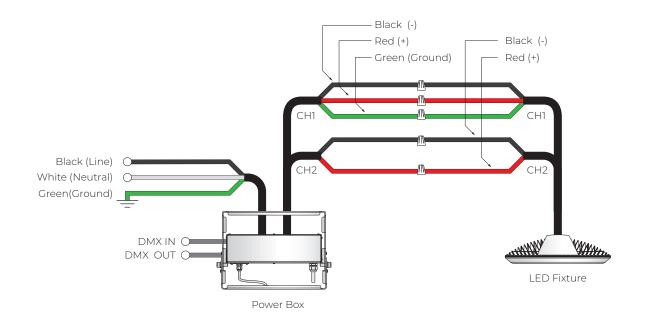

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.



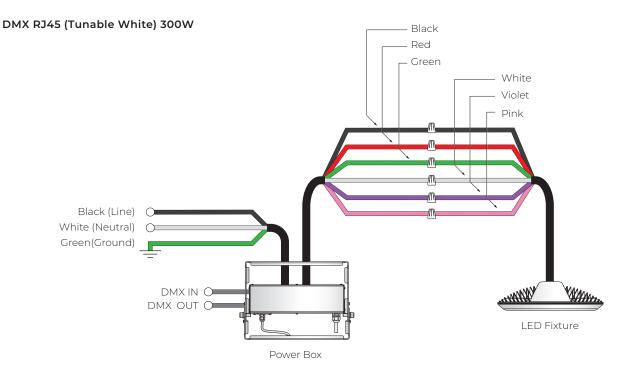

 meteor-lighting.com
 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060

 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. @Meteor Illumination Technologies, Inc.

 07-02-2024