
# BOLT NOVA

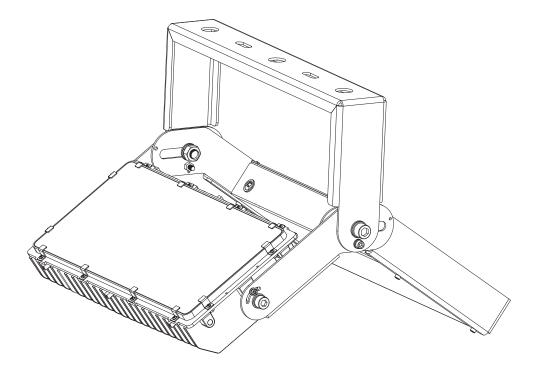



#### FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




meteor-lighting.com

### BOLT NOVA 350W BRACKET MOUNT




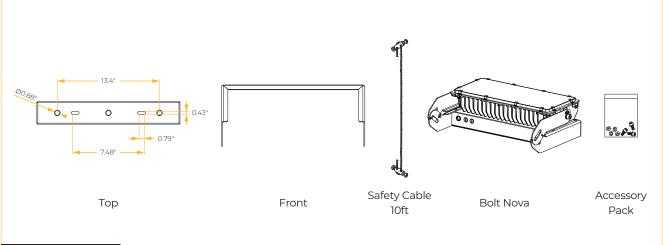


#### INCLUDED PARTS

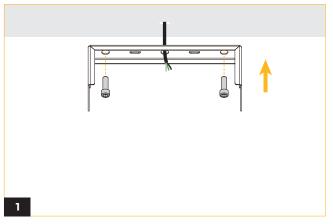



Secure the mounting bracket to a level surface using appropriate mounting hardware capable of supporting the fixture's weight. (350W: 24.25 lbs)

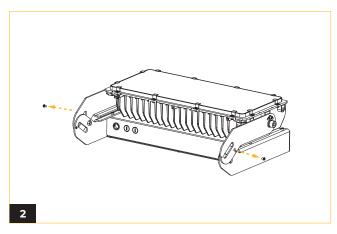

Unscrew the 2 outer fixed screws from the bracket.

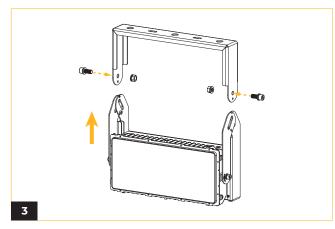



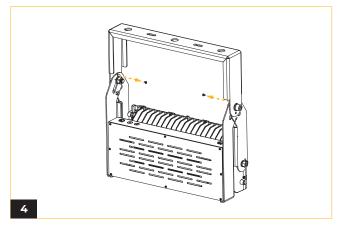


Unscrew the 2 inner fixed screws from the bracket.

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.


#### INSTALLATION GUIDE

### BOLT NOVA 350W BRACKET MOUNT


## METEOR

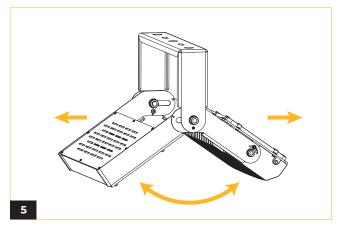


Unfold the luminaire body by pulling on each side, ensuring that the brackets are fully expanded.

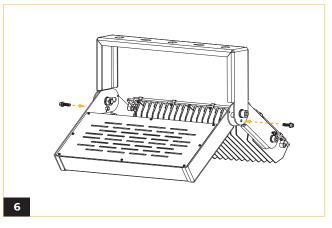

Secure the bracket by screwing back the two outer fixed screws.

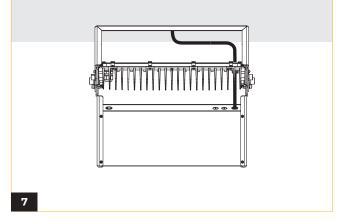

Establish electrical connections between the junction box and the fixture. (Refer to wiring diagram)

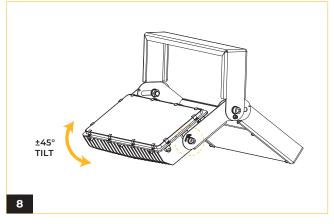


The light engine can be adjusted within a range of  $\pm 45$  degrees. To secure the rotated position, tighten the screws on each side.

## BOLT NOVA WIRING DIAGRAM




#### WIRING DIAGRAM


NOD

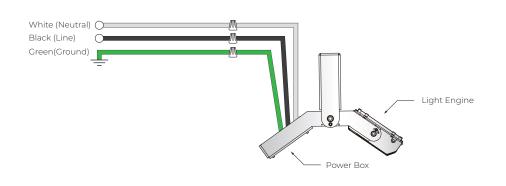

#### STV 1-10V

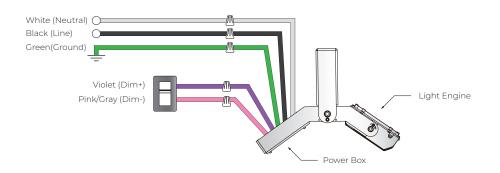

#### DMX

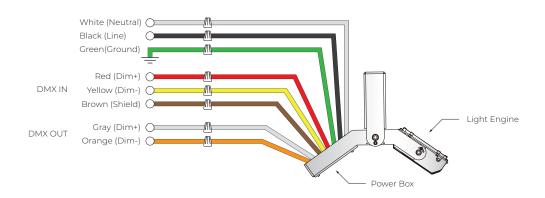

### INSTALLATION GUIDE BOLT NOVA WIRING DIAGRAM

## **METE**<sup>O</sup>R

#### WIRING DIAGRAM

#### Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

#### Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of  $120\Omega$  and a low capacitance. For instance : Belden 9729.
- 4. DMX must be terminated with a  $120\Omega$  resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For tunable white fixtures, After "32" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX Thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of 120  $\!\Omega$  and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of  $100\Omega$ .
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc. 07-02-2024